

**Call Us:** (U.S. & Canada)  
**1-800-332-2500**

**Fax Us:** (U.S. & Canada)  
**1-800-227-1511**

## CONTACTORS

### 30-60 Amp Contactors — Hartland Controls

| Description       | Coil Voltage | Poles | Inductive Rating | Resistive Rating | Order Number |
|-------------------|--------------|-------|------------------|------------------|--------------|
| CONTACTOR         | 24           | 2     | 30A              | 40A              | 44-1611      |
| CONTACTOR         | 24           | 2     | 30A              | 40A              | 44-1615      |
| CONTACTOR w/COVER | 110-120      | 2     | 30A              | 40A              | 44-1107      |
| CONTACTOR         | 120          | 2     | 30A              | 40A              | 44-1609      |
| CONTACTOR         | 208-240      | 2     | 30A              | 40A              | 44-1610      |
| CONTACTOR w/COVER | 208-240      | 2     | 30A              | 40A              | 44-1105      |
| CONTACTOR         | 24           | 3     | 30A              | 40A              | 44-1100      |
| CONTACTOR         | 110-120      | 3     | 30A              | 40A              | 44-1069      |
| CONTACTOR         | 208-240      | 3     | 30A              | 40A              | 44-1071      |
| CONTACTOR         | 24           | 4     | 30A              | 40A              | 44-1129      |
| CONTACTOR         | 110-120      | 4     | 30A              | 40A              | 44-1073      |
| CONTACTOR         | 208-240      | 4     | 30A              | 40A              | 44-1075      |
| CONTACTOR         | 24           | 2     | 40A              | 50A              | 44-1614      |
| CONTACTOR w/COVER | 24           | 2     | 40A              | 50A              | 44-1131      |
| CONTACTOR         | 110-120      | 2     | 40A              | 50A              | 44-1077      |
| CONTACTOR         | 120          | 2     | 40A              | 50A              | 44-1612      |
| CONTACTOR         | 208-240      | 2     | 40A              | 50A              | 44-1613      |
| CONTACTOR w/COVER | 208-240      | 2     | 40A              | 50A              | 44-1079      |
| CONTACTOR         | 24           | 3     | 40A              | 50A              | 44-1102      |
| CONTACTOR         | 110-120      | 3     | 40A              | 50A              | 44-1081      |
| CONTACTOR         | 208-240      | 3     | 40A              | 50A              | 44-1083      |
| CONTACTOR         | 24           | 4     | 40A              | 50A              | 44-1133      |
| CONTACTOR         | 110-120      | 4     | 40A              | 50A              | 44-1085      |
| CONTACTOR         | 208-240      | 4     | 40A              | 50A              | 44-1087      |
| CONTACTOR         | 24           | 3     | 50A              | 65A              | 44-1617      |
| CONTACTOR         | 110-120      | 3     | 50A              | 65A              | 44-1089      |
| CONTACTOR         | 208-240      | 2     | 50A              | 65A              | 44-1616      |
| CONTACTOR         | 208-240      | 3     | 50A              | 65A              | 44-1091      |
| CONTACTOR         | 110-120      | 3     | 60A              | 75A              | 44-1093      |
| CONTACTOR         | 208-240      | 3     | 60A              | 75A              | 44-1095      |
| CONTACTOR         | 120          | 3     | 75A              | 93A              | 44-1618      |
| CONTACTOR         | 208-240      | 3     | 75A              | 93A              | 44-1619      |
| CONTACTOR         | 120          | 3     | 90A              | 120A             | 44-1620      |
| CONTACTOR         | 208-240      | 3     | 90A              | 120A             | 44-1621      |



44-1611, 44-1609, 44-1610,  
44-1614, 44-1613



44-1615



44-1105, 44-1107, 44-1077,  
44-1079, 44-1131



44-1069, 44-1071, 44-1073, 44-1075,  
44-1081, 44-1083, 44-1089, 44-1091,  
44-1093, 44-1095, 44-1100, 44-1102,  
44-1129



44-1612



44-1087, 44-1085,  
44-1133



44-1617



44-1616



44-1618, 44-1619,  
44-1620, 44-1621

## CONTACTORS (CONT.)

### Hartland Replacement Coils

| Description      | Coil Voltage | Contactor Size     | Order Number   |
|------------------|--------------|--------------------|----------------|
| REPLACEMENT COIL | 24 VAC       | 50-60 Amp, Model B | <b>44-1625</b> |
| REPLACEMENT COIL | 120 VAC      | 50-60 Amp, Model B | <b>44-1626</b> |
| REPLACEMENT COIL | 208-240 VAC  | 50-60 Amp, Model B | <b>44-1627</b> |
| REPLACEMENT COIL | 480 VAC      | 50-60 Amp          | <b>44-1628</b> |
| REPLACEMENT COIL | 24 VAC       | 75-90 Amp          | <b>44-1629</b> |
| REPLACEMENT COIL | 120 VAC      | 75-90 Amp          | <b>44-1630</b> |
| REPLACEMENT COIL | 120-240 VAC  | 75-90 Amp          | <b>44-1631</b> |



**44-1625**



**44-1626**



**44-1627**



**44-1628**



**44-1629**



**44-1630**



**44-1631**

### Hartland Auxiliary Interlocks

| Description          | Interlock Circuit | Contactor Size | Order Number   |
|----------------------|-------------------|----------------|----------------|
| AUXILIARY INTERLOCKS | 1 NO              | 20-40 Amp      | <b>44-1622</b> |
| AUXILIARY INTERLOCKS | 1 NC              | 20-40 Amp      | <b>44-1623</b> |
| AUXILIARY INTERLOCKS | 1 NO-1 NC         | 20-40 Amp      | <b>44-1624</b> |



**44-1622**



**44-1623**



**44-1624**