

PARTY PUMPS



MM-B68

See **page 41** for cleaning solution



M5-801147

Re-lube probe and body o-rings after cleaning for optimum performance

Complete kit includes a faucet brush, faucet wrench, chemical and instructions.



M5-801147-CK



TT-75R



R4219



JERR-9



7977H6



HP-111



7977H6B



FN-013

PARTY PUMP CLEANING

COMPLETE KITS

PART NO.	DESCRIPTION	SYSTEM	LITER / GAL
M5-801147	Bottle, cap and dip tube	D	5 / 1.3
M5-808033	Bottle, cap and dip tube	S	5 / 1.3
M5-808041	Bottle, cap and dip tube	U	5 / 1.3
M5-808053	Bottle, cap and dip tube	A	5 / 1.3
M5-808051	Bottle, cap and dip tube	G	5 / 1.3
M5-801147-CK	5 L – complete kit	D	5 / 1.3

EASY PARTY PUMP CLEANING PROCEDURES

1. Remove cleaning bottle cap. Mix cleaning chemical with water per manufacturer's instructions.
2. Screw cap back on to bottle and engage picnic pump as if tapping a keg.
3. Pressurize cleaning bottle with party pump and release cleaning solution by squeezing faucet, allowing approximately 1 liter (.26 gal) to flow out.
4. Remove cleaning bottle cap. Rinse bottle and cleaning cap. Pour fresh water into cleaning bottle. Screw bottle cap back on and engage party pump.
5. Pressurize cleaning bottle with party pump and release fresh water by squeezing faucet, allowing approximately 1 liter (.26 gal) to flow out.



KEG CONTAINERS

PART NO.	DESCRIPTION
TT-75R	Tubtrug – super-flexible, integrated handles
R4219	Shorty 19 gal (with rope handles)

SUB ASSEMBLIES

RESTRICTED ROD ASSEMBLY

PART NO.	PUMP INCLUDED
JERR-9	HP-900

VERTICAL CONVERTER ASSEMBLY

PART NO.	DESCRIPTION
H6B-700	Includes HP-700
7977H6	Vertical converter
7977H6B	Vertical converter with beer line, faucet, air line and clamps
HP-111	Pump to coupler adapter with hose barb
FN-013	Pump to coupler adapter, dual threaded