



## Sneeze Guards for MobileServ® Carts ASSEMBLY INSTRUCTIONS

Model SG-1 - for 3-Bay/ 6 Pan MobileServ® Cart Models

Model SG-4 - for 4-Bay/ 8 Pan MobileServ® Cart Models

Model SGJ-2 - for 2-Bay/ 4 Pan CBC-HH Series MobileServ® Junior Cart Models



SG-1



SG-4



SGJ-2

**NOTE:** For all carts, foods must be pre-heated or pre-chilled (as applicable) to serving temperature before placing in pans in the cart.

### **Cadco, Ltd.**

200 International Way, Winsted, CT 06098

860-738-2500 • Fax 860-738-9772

E-mail: [info@cadco-ltd.com](mailto:info@cadco-ltd.com) • Website: [www.cadco-ltd.com](http://www.cadco-ltd.com)

### **SGJ-2 Sneeze Guard for CBC-HH Series MobileServ® Junior Carts**

**\*\*\*ALWAYS ATTACH SNEEZE GUARD TO CART BEFORE ATTACHING PAN HOLDERS\*\*\***


For these models, UNSCREW AND REMOVE the Pan Holder Locking Knobs on Top Cart Surface before attaching Sneeze Guard.

Line up the holes in the Sneeze Guard legs with the holes for the far left and far right Pan Holder Locking Knobs on Cart Top Surface.

Then replace and LOOSELY screw the Pan Holder Locking Knobs,

leaving space to slide Pan Holder Keyhole Slots under the Pan Holder Locking Knob heads.


Position Panholders over the Pan Holder Locking Knobs and slide into place. Securely tighten Pan Holder Knobs.

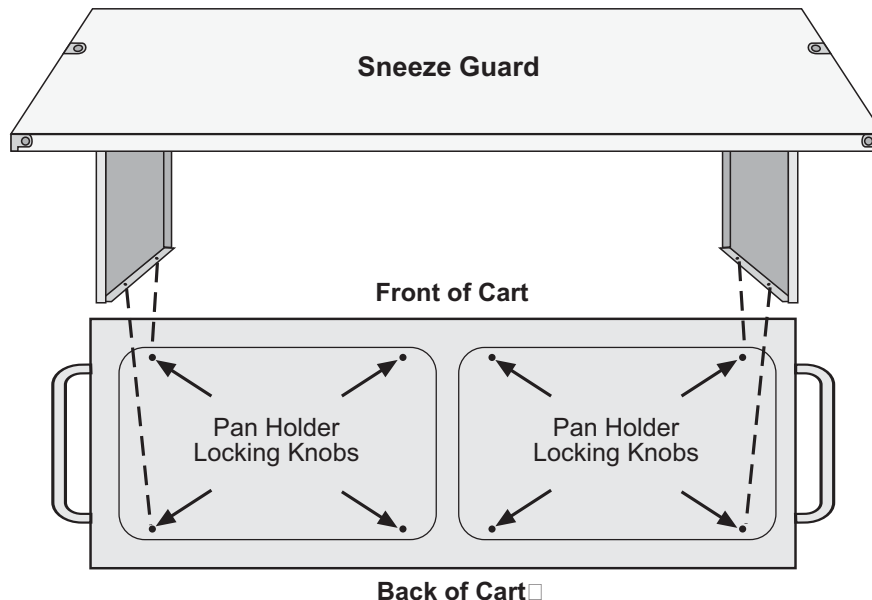

**SG-1/ SG-4 Sneeze Guards for 3 & 4 Bay MobileServ® Carts**  
 (for attaching to CBC-HC Series Carts with Cambro® Camchiller, see next section)

**\*\*\*ALWAYS ATTACH SNEEZE GUARD TO CART BEFORE ATTACHING PAN HOLDERS\*\*\***

For these models, LOOSEN BUT DO NOT REMOVE the Pan Holder Locking Knobs on Cart Top Surface before attaching Sneeze Guard. Position the Keyhole Slots on the Sneeze Guard over the Pan Holder Locking Knobs, slide the Sneeze Guard into place, repeat with all Panholders, and then tighten all Pan Holder Locking Knobs.

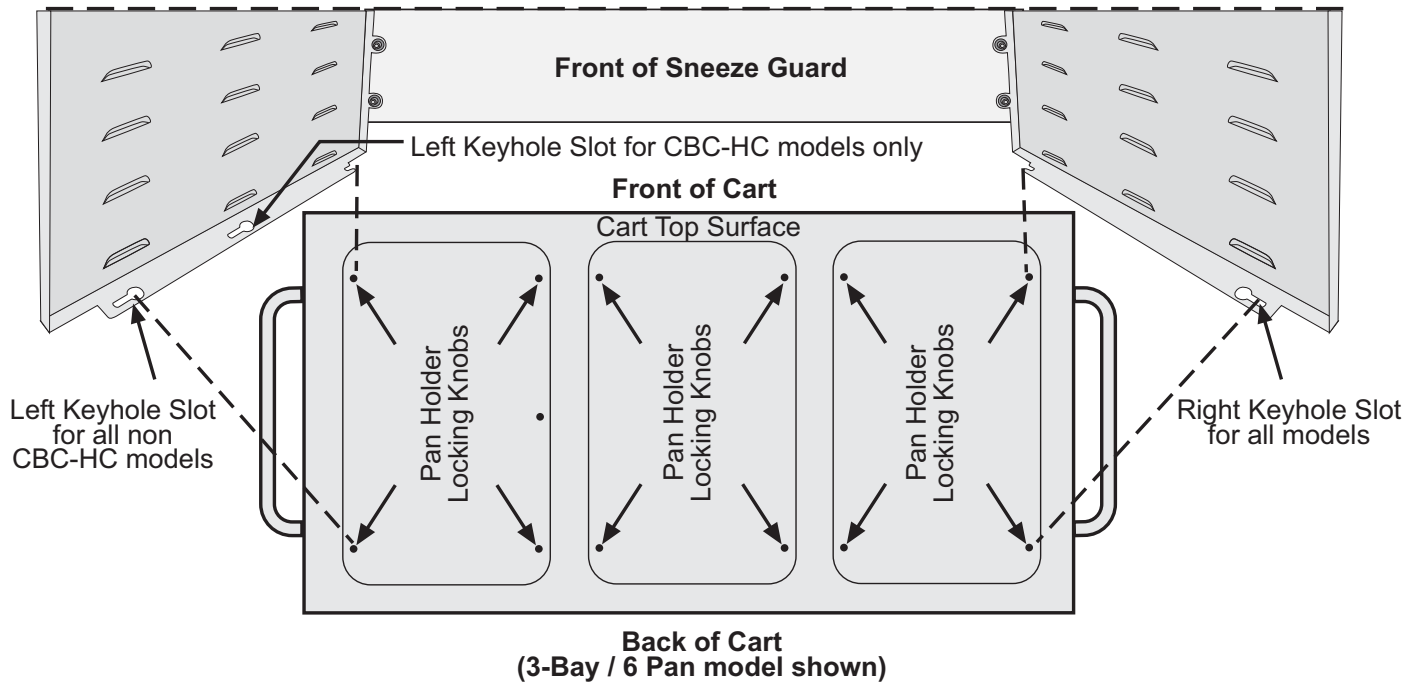

**SG-1 Sneeze Guard for CBC-HC Series MobileServ® Carts with Camchiller® only**

**\*\*\*ALWAYS ATTACH SNEEZE GUARD TO CART BEFORE ATTACHING PAN HOLDERS\*\*\***

For these models, LOOSEN BUT DO NOT REMOVE the Pan Holder Locking Knobs on Cart Top Surface before attaching Sneeze Guard. Position the Keyhole Slots on the Sneeze Guard over the Pan Holder Locking Knobs on the Cart Top Surface, slide the Sneeze Guard into place, repeat with all Panholders, and then tighten all Pan Holder Locking Knobs.

Place pre-frozen Camchiller® in bottom of Cold Bay Pan Holder when ready to use. Then position pans in the Pan Holders.

